

Quick Reference Guide

Tandberg 1700 MXP

Waking up the System

- ⇒ To wake up the system pick up the **Remote Control**.
- ⇒ If the system does not wake up, press any key.

The welcome screen will then come up & may display the following info: (dependent upon system configuration).



- ⇒ System Name
- ⇒ Your IP Address
- ⇒ Indications of Missed calls or Warnings, if applicable.

Make a Call Manually

- ⇒ Select **Make a Call** from the menu, by pressing the green  **Call** key on the remote control.
- ⇒ Enter the dial number manually using the **Numerical Keypad**. When dialing manually, use the * key as a separator in IP addresses.

Make a Call Using Phone Book

- ⇒ Press the **Phone Book**  icon on the remote control.
- ⇒ Use the arrow keys to navigate the list & located the person you will be calling.
- ⇒ Press the green  call key to initiate your call.

Ending a Call

- ⇒ Press the **End Call**  button on the remote control.
- ⇒ Press the **OK/Menu** button on the remote control to display the menu.

If the System Fails to Respond

- ⇒ Make sure the system is receiving power & verify that the LED illuminates a green light. The LED is located towards the top (left-hand) side, next to the mounted HD camera.
- ⇒ Make sure the Remote Control has working batteries.

On Screen Indicators

 **Volume Off** - This indicator is shown when the volume is turned off. Press **Volume +** to turn the volume back on.

 **Microphone Off** - This indicator is shown when the microphone is turned off. The indicator will start to flash if audio is detected in the room during a call and the microphone is turned off. Press the **Mic off** button again to turn the microphone back on. Be aware that many calls can be connected automatically when Mic is off. The icon will start to flash when you start speaking. Remember to turn the microphone on before a meeting.