

Quick Reference Guide

Tandberg Edge 95 MXP

Powering on Edge 95 MXP Codec

- ⇒ To power on the Edge 95 MXP, the power switch is located on the back of the Codec.
- ⇒ Verify that the monitor is switched on.
- ⇒ **PLEASE** leave device powered on at all times.

Edge 95 MXP Codec
with HD Camera



Tandberg Intern
with Edge 95 MXP
Codec & HD Camera

Tandberg Precision HD Camera

- ⇒ High Resolution, 1280x720p@30fps
- ⇒ High quality colors and dynamic range
- ⇒ 70° wide angle lens with 7x zoom
- ⇒ High quality image sharpness
- ⇒ Fully Automatic

Waking up the System

- ⇒ To wake up the system pick up the **Remote Control** & press your **OK/Menu** button.

On Screen Indicators



Volume Off - This indicator is shown when the volume is turned off. Press **Volume +** to turn the volume back on.



Microphone Off - This indicator is shown when the microphone is turned off. The indicator will start to flash if audio is detected in the room during a call and the microphone is turned off. Press the **Mic off** button again to turn the microphone back on. Be aware that many calls can be connected automatically when Mic is off. The icon will start to flash when you start speaking. Remember to turn the microphone on before a meeting.

Make a Call Manually

- ⇒ Select **Make a Call** from the menu, by pressing the green  call key on the remote control.
- ⇒ Enter the dial number manually using the **Numerical Keypad**. When dialing manually, use the ***** key as separator in IP addresses.

Make a Call Using Phone Book

- ⇒ Press the **Phone Book**  icon on the remote control.
- ⇒ Use the arrow keys to navigate the list & located the person you will be calling.
- ⇒ Press the green  call key to initiate your call.

Ending a Call

- ⇒ Press the **End Call**  button on the remote control.
- ⇒ Press the **OK/Menu** button on the remote control to display the menu.